T002A-MX

RoHS

FR
POCHETTE
+ COTON MOUSSE
+ ÉTUI

BAC DE TRI

FR
Cet appareil se recycle
À DÉPOSER EN MAGASIN
ou
À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.quefaire-mesvieuxvetements.fr
Privilégiez la réparation ou le don de votre appareil !

MAXONAR

Wireless VR Earbuds

We hope you never have the need, but if you do, our service is friendly and hassle-free.

support@maxonar.com www.maxonar.com

©2024 Maxonar Inc.
All rights reserved.
Inspected and Passed
Design in California. Made in CN

EU REP
eVatmaster Consulting GmbH
Battonastr. 30
60325 Frankfurt am Main, Germany
contact@evatmaster.com
OST_EU_20220222000008

UK REP
EVATOST CONSULTING LTD
Office 1013, 71-75 Shelton Street, London,
United Kingdom, WC2R 9AY
contact@evatost.com
OST_UK_20220221000013

Please remove the protective film on the earbuds, otherwise the earbuds will not turn on.

Maxonar

VR Gaming Earbuds

Model: VAA001

Color: Black

X004H1H94J

VR Gaming Earbuds Made in China

New MXVAA0012448

MAXONAR

Wireless VR Earbuds

User Manual
(EN / DE / FR / IT / ES / NL / TR / SE / PL)

Product Specifications

Charging Case:

Battery Capacity:	500mAh
Charging Input:	5V ⎓ 420mA
Charging Time:	About 1.5 hours
Charging Method:	Type-C

Earbuds:

Battery Capacity:	65mAh
Charging Input:	5V ⎓ 90mA
Charging Time:	About 1.5 hours
Charging Method:	Place earbuds into the charging case
Device Name:	Maxonar VAA001

Dongle:

Recoil Power:	18W Max (9V/2A)
Charging Method:	Type-C

Packaging List:

❶ Wireless VR Earbuds*1
❷ USB C Charging Cable*1
❸ Ear Tips*4
❹ User Manual*1

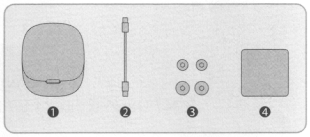

Earbuds Appearance and Function Overview

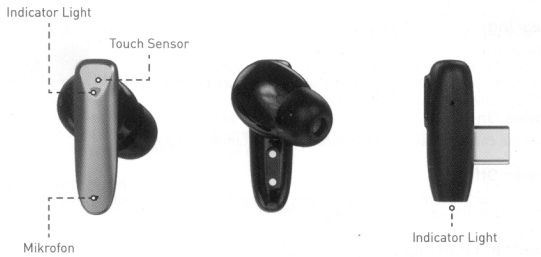

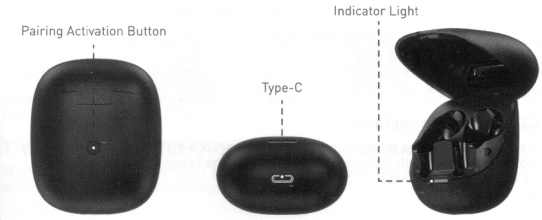

First Use:
Please remove the protective film from the earbuds; otherwise, the earbuds will not turn on.

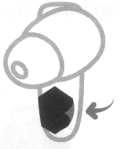

Wearing:

1. Choose the Ear Tips that fit your ears best.
2. Insert the earbuds into the inner canal of your ears and turn gently until you find the most comfortable and secure position.

Power On:

Open the charging case, and the earbuds will automatically power on.

Power Off:

Place the earbuds into the charging case; closing the case lid will automatically power off the earbuds and initiate charging.

Bluetooth Pairing:

Open the charging case, then press and hold the button on the case for 3 seconds to enter Bluetooth pairing mode. Select "Maxonar VAA001" from your device's Bluetooth menu to connect.
During Bluetooth pairing, the connection between the earbuds and the 2.4G transmitter may be temporarily interrupted. Once Bluetooth pairing is successful or when you place the earbuds back in the charging case and close and open the case again, the connection with the 2.4G transmitter will resume.

2.4G Dongle Connection:

When the 2.4G Dongle is plugged into the USB-C port of a VR headset or game console, the earbuds will automatically connect and be ready to use. If necessary, use a USB-C to USB adapter.

Simultaneous Bluetooth and 2.4G Connection:

Earbuds can be connected to two devices simultaneously (via 2.4G transmitter or Bluetooth).
Only one device can play music at a time. If you receive a call on the Bluetooth device, the volume of the device connected via 2.4G transmitter will be lower than the volume of the Bluetooth device.

Volume Adjustment:

Press the right (R) earbud once to increase the volume by one level; only volume increase is available when using one earbud.
Press the left (L) earbud once to decrease the volume by one level; only volume decrease is available when using one earbud.

Song Selection:

Long press the left earbud for 2 seconds (next song only when using one earbud) to play the previous song.
Long press the right earbud for 2 seconds (next song only when using one earbud) to play the next song.

Play/Pause/Answering Calls:

While playing music, double-click the touch control button to pause the music.
While paused, double-click the touch control button to play the music.
When a call comes in, double-click the touch control button to answer the call.
During a call, double-click the touch control button to hang up.
When a call comes in, long press the touch control button for 2 seconds to reject the call.

TWS Pairing Mode (Left/Right Earbuds Connection):

When the left and right earbuds are both powered on and in pairing mode, they will automatically pair with each other.

Automatic Power Off and Reconnect:

When the earbuds exceed the effective distance range, they will disconnect. If returned to range within 5 minutes, they will automatically reconnect. If not returned within 5 minutes, the earbuds will automatically power off.

Battery Status:

When connected to an iOS device, the battery status of the earbuds will be displayed in the upper right corner of the iOS device screen.

Charging:

In low battery status, the red light stays on for 3 seconds before turning off. Insert the charging cable to charge the case; during charging: the red light breathes, when fully charged: the purple light stays on.

Playing While Charging

You need a charger that has a minimum output of 5V-1A/5V-2A, otherwise this function might not work properly.
*No data transmission is supported. Don't try to link a PC to a VR headset using a USB-C cable.

Warm Tips:

1.Use a 5V-1A/5V-2A charger to charge the case. Using a charger with a higher voltage may damage the charging case.
2.If the earbuds have not been used for more than 3 months, charge them before using.
3.If not used for a long time, it is recommended to charge the earbuds every 3 months to protect battery health.
4.Please fully charge the earbuds before using them for the first time.

⚠ Precautions:

1.Do not place the earbuds in high-temperature environments, including direct sunlight.
2.Do not place the earbuds near fire or other overheated environments.
3.Do not place the earbuds in damp environments or immerse them in liquids; keep them dry.
4.Do not attempt to charge the earbuds with anything other than the provided charging cable.
5.Do not disassemble or attempt to repair or modify the earbuds.
6.Be cautious of excessive drops, impacts, abrasions, or any other actions that may affect the earbuds' functionality. If there is any damage such as dents, punctures, tears, deformation, or corrosion, stop using the earbuds immediately and contact the retailer or use the warranty card's contact information.
7.If the earbuds emit an unusual odor, become excessively hot, or show abnormal color or shape changes, stop using them immediately and contact the retailer or use the warranty card's contact information.
8.Prolonged use at high volumes may damage your hearing.